

TF2218/7H-Series Smart Bypass

Relays


Fitting Guide



PLEASE READ INSTRUCTIONS BEFORE FITTING

- Route your power source cable(s) from the relay to the vehicle fusebox or battery using the appropriate connectors. **DO NOT** insert the 15amp fuse yet.
- Connect the 7 core cable from the trailer socket to the relay as per diagram and the appropriate wires from the relay to the vehicle loom.
- Connect thin signal wires Black and Brown to both the vehicle's side light circuits, Black (LH) and Brown (RH)
- **IMPORTANT!** <u>Dual lamp function</u>: If brake light and tail light or fog light and tail light share a common wire do not connect either of the side light wires (Black or Brown) from the relay to the car. The relay will interpret the signal on the brake signal wire (Red) or fog signal wire (Blue) and operate the lights, including the side lights, correctly.
- Insert a 15amp fuse at the power source and connect a test board to the socket. Test the installation by turning the car lights on and off and observing the lights on the test board.


FORD TRANSIT INSTALLATION When fitting the relay to a Ford Transit or in similar condensationprone environments, we recommend putting a coating of grease/sealer over exposed terminals.

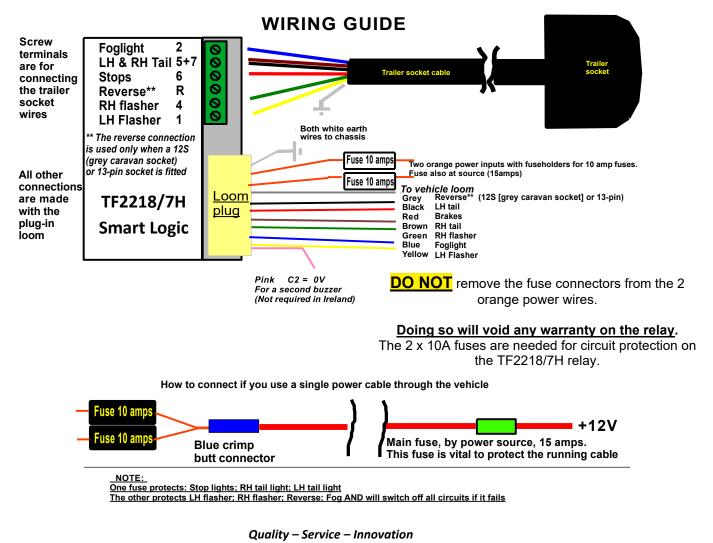

Unit 1, Chadwick Block, Bracewell Ave Poulton-le-Fylde, Lancashire, FY6 8JF, Phone: 01253 881008 (Fax: 01253 886434)



When fitting to a 24V Towing Vehicle with a 12V Trailer please refer to diagram below.

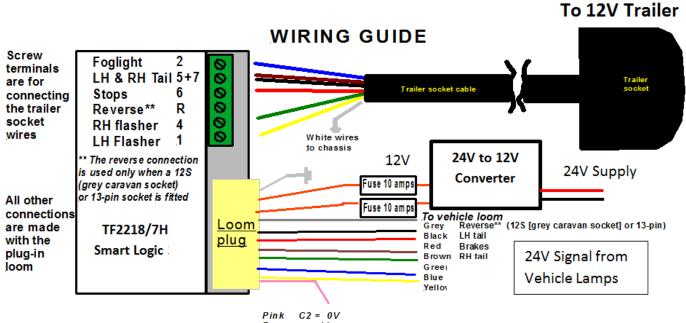

Pink C2 = 0V For a second buzzer (Not required in Ireland)